

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail installation@happy-trail.com.

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list on these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.



Step 1

Remove the left and right side covers, seat and fuel tank from the motorcycle as shown:



Step 2

Cut a 2" section of clear rubber tubing from one end of the supplied tube. Place one forked side of the Y fitting as shown by arrow 1 in Fig 2.

Remove the pink vent line from the left side of the carburetor as shown by arrow 1 in Fig 2. The vent line is located near the top of the carburetor near the choke cable. Reconnect the original vent line to the other forked side of the Y connector.

Step 3

#Connect the remainder of the clear vent tube to the final section of the Y fitting and run the vent line forward toward the headlight as shown in Fig 3.

KLR650 carburetor vent kit htp4-1-Carb



Fig 2

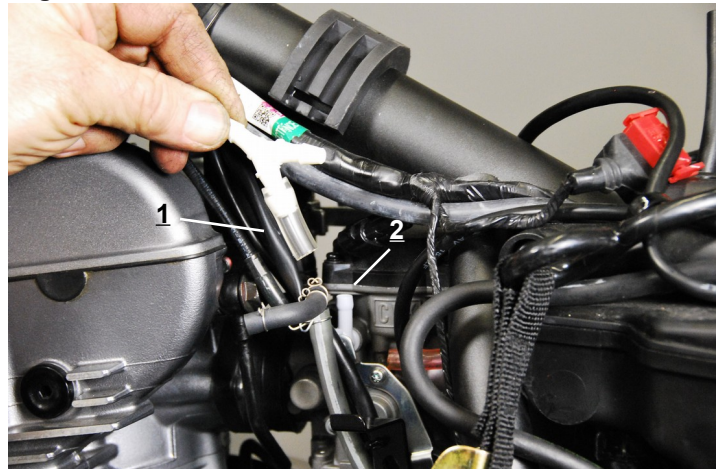


Fig 3



#